

DRIVING		MAINTENANCE		TECHNICAL SPECIFICATIONS	
Opening and locking	A CAPACITA OF THE PARTY OF THE	Water, oil and L.H.M. fluid levels	22	General	42
Doors, boot, bonnet, windows	2	Mechanical and electrical	24	Engine V	44
Driving position		Bodywork	26	Transmission	46
Controls and accessories	4	Interior	28	Hydraulic system	47
Instruments on panel	6	il in the second second		Suspension	48
Driving position Seats				Braking	50
Seat belts, rear-view mirrors	10			Steering and wheels	52
Starting		MINOR REPAIRS		Electrical system	54
Anti-theft device, ignition, starter,		Malfunction signalled by a dashboard		Bodywork and interior fittings	56
choke	12	warning lamp	6	《一》	-1
Driving		Wheel replacement	30		- 1/4
Gears, ground clearance	14 14 b	Bulb replacement	32-35		
Brakes	140	Headlamp adjustment	36	MISCELLANEOUS INFORMATION	
Signals and visibility		Fuse replacement	37	Running-in, servicing, guarantee	58
Lamps, signals, windscrees wipers	16	Battery replacement	38	Driving and running costs	58
Air-conditioning Ventilation, heating		Sparking plug replacement	38		STATE STEEL
demisting	18	Replacement of L.H.M. fluid in an	1 10 000	Towing a trailer	59
Accessories	30	emergency	39	Vehicle identification	59
Ashrays, sun visors		Starting using starting handle	39	Replacement, parts	59
interior interior	20	Towing the car	40	Travelling abroad	60
The state of the s	The state of the s			The second of th	

NOTE: positions are described as right-hand (R.H.) or left-hand (L.H.), as seen by a person standing behind the car and looking forward

towards the bonnet.

—Descriptions of the various items fitted to the car, cover standard fittings and optional extras. The inclusion of a description does not therefore imply that the item described is fitted to all models.

Page 60: ALPHABETICAL INDEX

Back of handbook MEMORANDUM FOR SERVICE-STATION AND LIST OF PRE-START CHECKS